



# ENGAGE™ WITH UNIFIT® REPLACEMENT INSTRUCTIONS

These instructions apply to all ENGAGE™ with UNIFIT® plank and tile formats.

# METROFLOR ENGAGE™

featuring UNICLIC® + UNIFIT®  
UNICLIC® PATENTED TECHNOLOGY

## TOOLS NEEDED

- Carpenter's Square
- Small Circular Power Saw
- Prevail™ Tapping Block
- Prevail™ 30-GS Adhesive
- Marker
- Safety Glasses
- Prevail™ Hand Roller
- Prevail™ Remove-All
- Utility Knife
- Shop Vac
- Sheetrock Tape (\*See back page)
- Clean, White, Lint-Free Cloth
- Small Chisel
- Lightweight Rubber Mallet

## BEFORE YOU BEGIN

Acclimate the repair material 48 hours prior to installation. Maintain the ambient temperature between 65° and 85° F, and relative humidity between 35% and 85% before, during and after the repair.

## REMOVE THE DAMAGED PLANK



1 Measure 1-1/2" inside the perimeter of the damaged plank, and mark.



2 Mark diagonal stopping points on the four corners of the damaged plank.



3 Use a plank as a gauge to set the saw blade to the proper depth to avoid cutting through the subfloor.



4 Carefully cut along the perimeter marks you made. Vacuum debris.



5 Remove the center section, using a small chisel to lift the first edge.



6 Carefully cut the diagonals. Vacuum debris.



7 Remove the remaining strips of material from the long and short edges.



8 Remove the lock from the long and short edges of the surrounding material with a small chisel. Vacuum debris.



9 Remove the exposed Unifit™ Locking Strip from the floor.



# ENGAGE™ WITH UNIFIT® REPLACEMENT INSTRUCTIONS

These instructions apply to all ENGAGE™ with UNIFIT® plank and tile formats.

# METROFLOR ENGAGE™

featuring UNICLIC® + UNIFIT®  
PATENTED TECHNOLOGY

## INSTALL THE REPLACEMENT PLANK

**\*NOTE:** If there is no underlayment installed under the Engage™ flooring, protect the subfloor from adhesive by sliding strips of sheetrock tape under the exposed perimeter edges of the repair before proceeding with the repair.




1 Remove the lock on the long and short sides of the replacement plank.



2 Remove the Unifit™ Locking Strip from the replacement plank.



3 Cut off the corner where the two grooved edges meet.

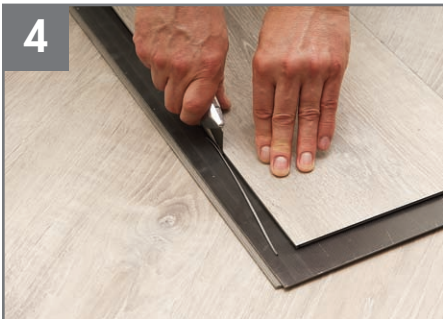

4 Remove the long, tongue edge of the replacement plank.



5 Apply a scant bead of Prevail™ 30-GS to the exposed groove sides of the flooring surrounding the repair.



6 Apply a scant bead of Prevail™ 30-GS to the groove sides of the re-placement plank.



7 Align the cut corner first, then drop the replacement plank into position.



8 Use the Prevail™ Tapping Block on the long and short sides to ease the replacement plank into place.



9 Hand roll the joints. Remove excess adhesive immediately using a small amount of Prevail™ Remove-All applied with a clean, white lint-free cloth. Never pour directly onto floor.



For technical inquiries and further information, contact Metroflor® Technical Support Services at (888) 235-6672.